


Assembling the Glass Rack

1. Lay out the parts which should look like the picture to the side.
2. Unscrew the top and bottom support brackets off the main shank. Each bracket should have 2 clear washers on the screw thread. (Pic below)
3. Take the 2 pieces of glass and the piece with the two holes connects up to the bottom brackets and the other piece goes to the top.
4. Tighten the brackets finger tight making sure a washer is placed each side of the glass.



5. Attach the 2 vertical brackets as shown in the picture below. You will need to loosen the plastic screws which grip onto the glass. Be careful not to over tighten them when attaching them to the shelves.

6. Attach the towel hanger to the underside of the bottom glass (as shown below) again being careful upon tightening the screws.

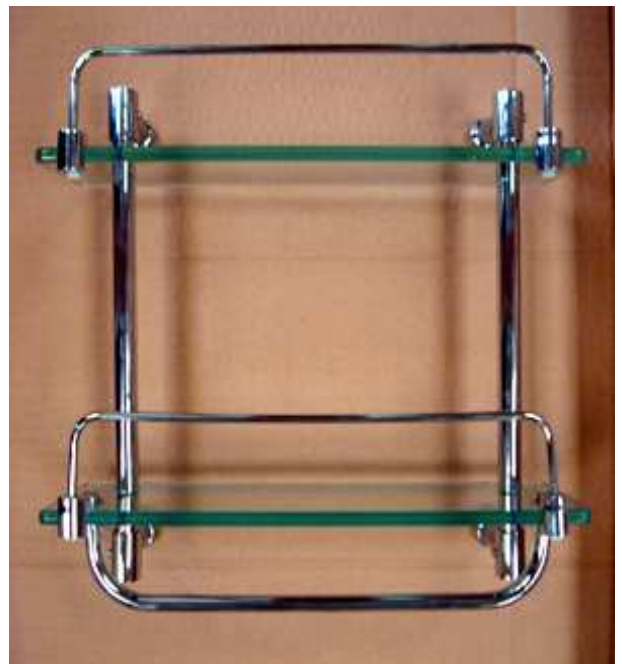

7. Attach the shelf to the back wall of the shower. You may need to adjust the top and bottom brackets to get a good fit. You will see on the side of each bracket is a small screw which needs adjusting. This will then allow the main uprights to move into position. In most cases all 4 brackets will need a small adjustment to get a comfortable fit.