

## F21 Geneva ( Instructions )

Thank you for your purchase. Before you start please check you have the correct contents.

### contents

- 1 x Tray 800 x 800 mm
- 2 x Side Glass Panels
- 1 x Glass door
- 2 x Rear Alloy Fixings
- 2 x Front Finishing Trims
- 2 x Front Alloy Frame



### Contents In Bag

- 2 x Door Knobs
- 2 x Alan Keys
- 4 x Door Runners
- 2 x Pack Of Screws And Fixings
- See pic 1 and 2




1 , Start by positioning the base in to place in the location of the shower then remove any protective covering .

2 , The most important part of building your shower is to make sure the base is flush to the wall and **LEVEL** .

3 , Locate both glass side panels they may look the same but make sure the panel with the magnet is on the right hand side ( as your facing it)

4 , Locate the two front alloy straight columns and join the two sides together making sure the runners are the same as the side panels.

See picture below:

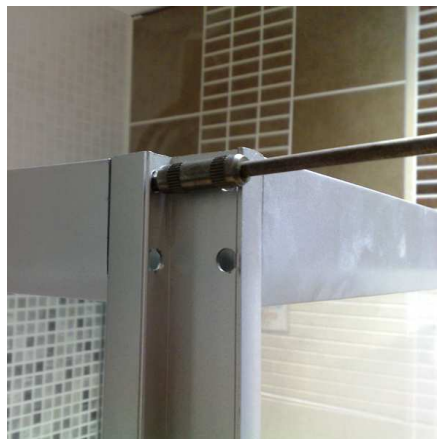

5 , Now you have the frame assembled and level you now need to secure it to the wall by using the two alloy columns . Make sure everything is level and secure both back alloy columns using the screws supplied. Also remember to silicone between the wall and the aluminium uprights.

6 , now time for the door using the Alan keys secure the four runners on to the glass . Now you can position the door on the four runners ( please make sure you have the magnet on the right so it seals to the frame when closed).



7 , The final finishing touch is to secure the two alloy finishing trims to the front of your shower.

**PLEASE NOTE THESE INSTRUCTIONS ARE GUIDELINES ONLY.  
TO MAKE YOUR SHOWER WATER TIGHT YOU WILL NEED TO USE SILICON ON EVERY PANEL.**

